

ENGLISH - The EL-4714 is a 2-Way Keyfob transmitter designed for use with the iConnect 2-Way security system.

## Registration

The EL-4714 must identify itself to the iConnect 2-Way receiver as follows:

- Set the system to registration mode.
  - Go to the main menu and select [9]>[1]>[2] (Programming > Devices > Keyfobs)
  - Select a Keyfob and press '√'.
- Press one of the buttons on the Keyfob, making sure that the Keyfob's green LED lights up when the button is pressed.
 

Note: A red LED indicates a communication problem between the Keyfob and the system.
- As soon as 'Save?' appears press '√'.
- Set the Keyfob parameters as described in the installer instructions.

## Deleting a Keyfob

To delete a Keyfob from the system:

- Set the system to Delete mode.
  - Go to the main menu and select [9]>[1]>[2] (Programming > Devices > Keyfobs).
  - Select a Keyfob (1-19) and press '√'
  - Press >6 > √.
- Press  +  for two seconds until the red led stops flashing.
- Press  +  for two seconds until the red led stops flashing.

## Battery Replacement

If the LED blinks during transmissions, this indicates that the battery is low and need replacing.

To replace the battery:

- Insert a small screwdriver into the pry-off slot. Carefully twist the screwdriver to separate the front and back of the casing.
- Observing correct polarity, replace the battery.
- Close the casing making sure that the front and back click shut.

Caution: Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

## Technical Specifications:

Frequency: 868.35MHz \*, 433.92MHz  
 Power: 3V Lithium Battery, Type CR2032  
 Caution: Fire, explosion and severe burn hazard! Do not recharge, disassemble or heat above 100°C.  
 Current Consumption: 16mA (transmission), 0.2µA (standby)  
 RFI Immunity: According to EN 50130-4  
 Operating Temperature: -10° C to 55°C  
 \*Complies with EN 50131-3 Grade 2 Environmental Class II

## Keys Operation

-  : Full Arm
-  : Disarm
-  : Part Arm, HA/PGM
-  : Perimeter Arm, HA/PGM
-  +  : Panic alarm (Press and hold down)



## LEDs indication

- Green: Operation successful
- Flashing green for 4 seconds: Operation fail
- Flashing Red for 4 seconds: Low battery
- Flashing amber for 4 seconds: Out of range

